



Taking care of your separator

The best way to keep your equipment performing at its best is to stay ahead of problems. Our experts will work with you to develop a Performance Agreement suited to your needs.



RECOMMENDED SERVICE INTERVALS

Depending on the process and working conditions of the separator, service intervals will vary.



INTERMEDIATE SERVICE

Inspection and overhaul of the inlet/outlet and of the separator bowl, including the operating mechanism. Replacement of seals, gaskets and lubrication oil.



every **3** months / **2000** hrs



every **8000** hrs / **12** months



MAJOR SERVICE

Inspection and overhaul of the complete separator, including Intermediate Service. Replacement of seals and gaskets in the machine top part and operating water module system, and bearings in the machine bottom part.



Major Service and replacement of frame feet.



3-YEAR SERVICE



every **36** months

HOW TO ORDER

1.



Retrieve your separator's serial number from the machine plate.

2.



Look up the part number of the corresponding Service Kit in the spare parts catalogue.

3.



Contact your Alfa Laval representative to order and arrange service support.